



Official Lane Maintenance and Capital Equipment Provider

DIRECT+ Conditioning System



ENVOY



AUTHORITY22

Select Machine

Pattern Information

Date: 4-helmi-19
Pattern Type:
Pattern Difficulty:
Pattern Designer: JKH
Pattern Volume (ml): 23,41

Surface Information

Surface Type: Synthetic
Surface Brand: Brunswick Pro Lane
Age:

Pattern Parameters

Pattern Number:
Pattern Name: veteraani sm 2021
Mode: Clean & Oil
Forward Speed: Heavy Clean (Envoy)
Start Cleaner Spray: 0
Start Squeegee: 0
Start Oiling: 6
Split Pattern:


Supplies Information

Lane Cleaner: Judge
Cleaner Mixture Ratio: 6 : 1
Cleaner Transition Distance: Authority22
Cleaner Spray End Distance: 54 Envoy
Lane Conditioner: DefyV30

Notes:

Table with 8 columns (Zone 1-8) and 3 rows (Zone End Distance, Zone Ratio, Zone Volume (ml)).

Table with 8 rows (ZONE 1-8) and 34 columns (7 Pin Side, Board Number, 10 Pin Side).

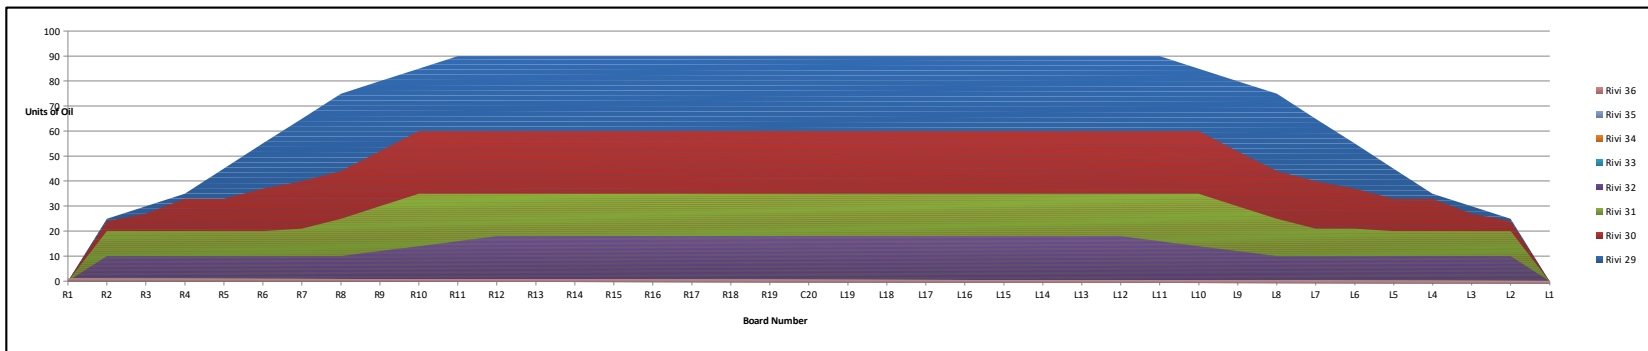



## veteraani sm 2021

### Crosswise Ratios (by units)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 46,0	1,9	3L-7L	Left = 0,0	#JAKO/0!
3R-7R	Right= 46,0	1,9	3R-7R	Right= 0,0	#JAKO/0!
18L-18R	Center = 90,0		18L-18R	Center= 0,0	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 34,0	1,7	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 34,0	1,7	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center= 60,0		18L-18R	Center= #JAKO/0!	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 20,4	1,7	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 20,2	1,7	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center= 35,0		18L-18R	Center = #JAKO/0!	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 10,0	1,8	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 10,0	1,8	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center = 18,0		18L-18R	Center= #JAKO/0!	

### Crosswise Ratios (by ml)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,251	1,9	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,251	1,9	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center = 0,490		18L-18R	Center= 0,000	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,086	1,7	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,086	1,7	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center= 0,151		18L-18R	Center= 0,000	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,051	1,7	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,051	1,7	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center= 0,088		18L-18R	Center = 0,000	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,025	1,8	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,025	1,8	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center = 0,045		18L-18R	Center= 0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

